


ROKU 2 Instruction

Set-Up the Roku 2 Player-

1. Connect the Roku 2 player to your HDTV by using the supplied HDMI cable. Connect one end of the cable to the HDMI port on the back of your ROKU 2 player and connect the other end of the cable to an open HDMI port on your HDTV
2. Power on your ROKU 2 player by using the included power adapter. Plug in the power adapter to a nearby wall outlet and connect the other end to the open port on the back of the Roku 2 player. **(There is no separate on/off switch on the device.)**
3. Make sure the supplied batteries are in the Roku remote. Become familiar with the Roku remote buttons (see attached diagram)
4. Power on your HDTV and look for a Roku message to fill the screen. If you see a **blank screen**, make sure your TV input matches the physical connection used to connect your Roku 2 player to your TV. Press the INPUT or SOURCE button on your TV remote until you see the ROKU screen.

Configure the Wi-Fi connection to the Roku player

1. Use the arrow and OK buttons on the Roku remote to select the on-screen options for connecting your Wi-Fi to the Roku. The Wi-Fi connection is under settings on the main Home page.
2. It will take a few moments for the device to complete connection-depending on your Wi-Fi Broadband Width and Speed. Once connected, press the HOME button on the Roku remote to go back to the home screen.

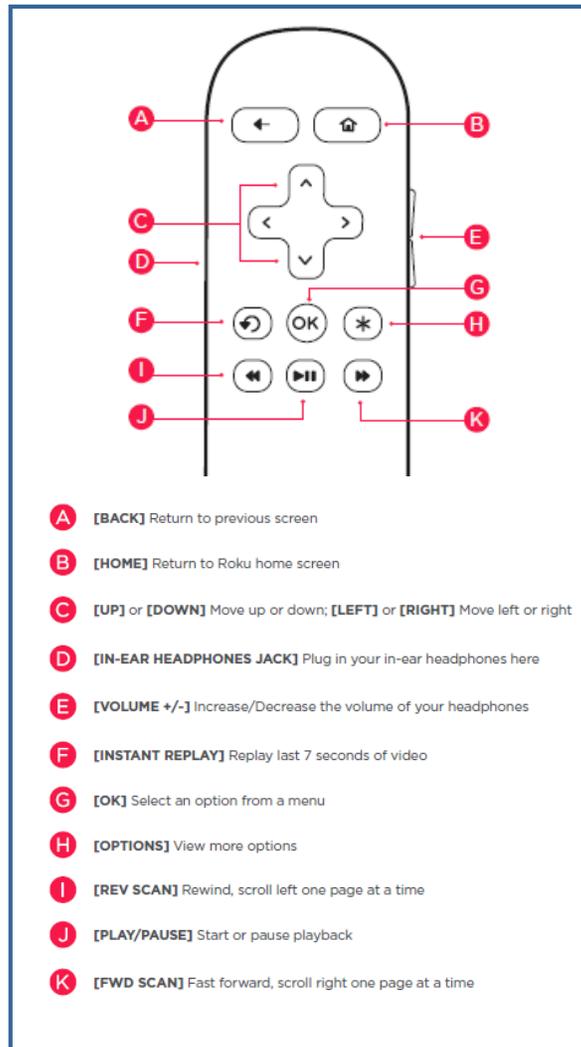

REMOTE NOT WORKING? Make sure batteries are installed properly and if needed, replace with new batteries provided. Also, make sure you aim the Roku remote at the Roku device, not the TV.

Roku TV



Pottstown
Regional Public
Library

Roku 2 Streaming Channels

For Netflix- The Library has a Netflix subscription for patron use on the Roku players only.

1. Push the Netflix button on the remote –OR- select Netflix from the channel options on the Home screen on your HDTV once the Roku is set up.
2. Use the arrow buttons on the remote to scroll through the menu of Netflix content and push Ok to watch a selection.
3. –OR- Select the back button to get to the search feature to look for a specific title of a Netflix TV show or movie.
4. To exit Netflix, push the Home button on the Roku remote. To watch another selection, push the back arrow.

IMPORTANT: Please DO NOT change any of the account settings-DO NOT sign out of the Library's Netflix account, change the Netflix email or password or try to enter personal information such as your own email, credit card information, etc.

A \$20 fee will be charged to any patron who resets any device settings

DO NOT ATTEMPT TO PURCHASE ANY MOVIES OR SHOWS OR CHANGE OR UNLOCK THE PARENTAL BLOCKS ON THE CHANNELS.

For Movies on Vudu-The library has a Vudu account for streaming of movies. Only movies available under the “My Vudu” menu are part of the Library’s collection of free movies.

1. Push the Vudu button on the remote –OR- select Vudu from the channel options on the Home screen on your HDTV once the Roku is set up.
2. From the top menu on the Vudu screen, use the arrows to scroll over to the “My Vudu” tab and select OK from the remote.
3. Next, press the right arrow button once to get to the “Movies” tab and again select OK on the Roku remote.
4. From here you can select to WATCH any of the movies that are listed in the library’s collection of “My Movies.
5. To exit Vudu, push the Home button on the Roku remote. To watch another selection, push the Back arrow.

IMPORTANT: Please DO NOT change any of the account settings-DO NOT sign out of the Library’s Vudu account, change the Vudu email or password or try to enter personal information such as your own email, credit card information, etc.

A \$20 fee will be charged to any patron who resets any device settings

For Movies on AmazonPrime-The Library has a subscription for patron use on the Roku players only.

1. Push the Amazon button on the remote – OR- select AmazonPrime from the channel options on the Home screen on your HDTV once the Roku is set up.
2. Use the arrow buttons on the remote to scroll through the menu of Prime content and push OK to watch a selection.
3. To exit AmazonPrime, push the Home button on the Roku remote. To watch another selection, push the back arrow.

IMPORTANT: Please DO NOT change any of the account settings-DO NOT sign out of the Library’s Vudu account, change the Vudu email or password or try to enter personal information such as your own email, credit card information, etc.

A \$20 fee will be charged to any patron who resets any device settings

